


## TT18-4G-S Quick Setup Use Manual V2.2


Steps how to run the machine easily.

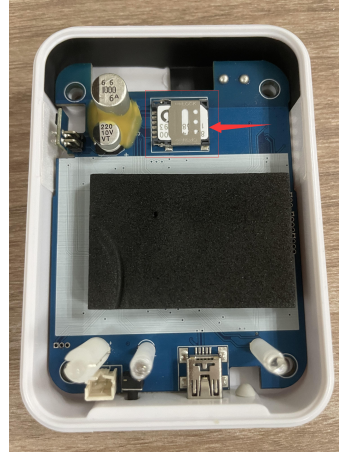

**Step1:** Unscrew the device

**Step2:** Install the 4G(LTE)/2G SIM card

**Step3:** Please check whether the SIM card needs to be set APN. Skip this item if no APN is required. If the APN needs to be set, connect the computer through the USB configuration cable and set the APN of the device

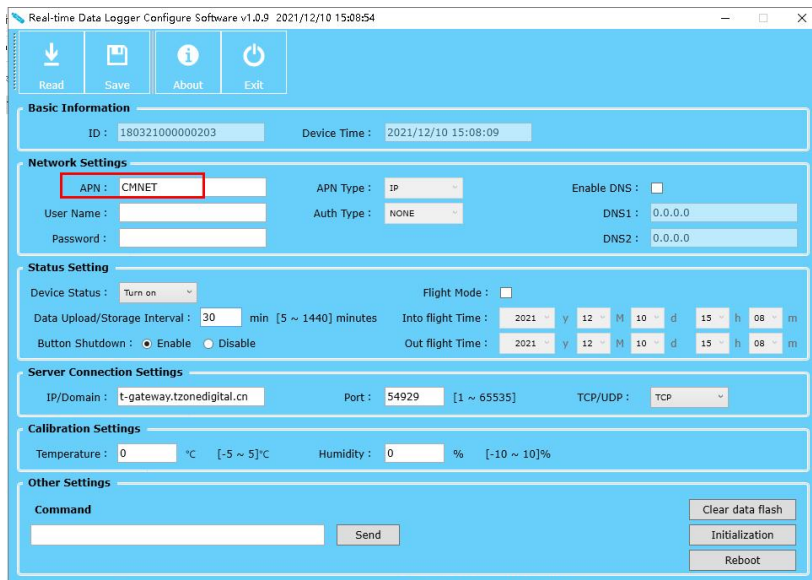

**Step4:** Press the button for 3 seconds, the device is running after the green light on for 5 seconds, and it will immediately send a data.




**Step5:** You can monitor the real-time temperature and humidity data on the web cloud platform, TT18-4G-S default every 15 minutes send a data to server, press the button shortly and then loose it.it will immediately send a data t server.

## Step6: Platform data query


**TZONE cloud platform Address:** <http://cloud.tzonedigital.com/>

Enter the data query interface after entering the URL in the browser. After entering the device ID, you can view this device data information.

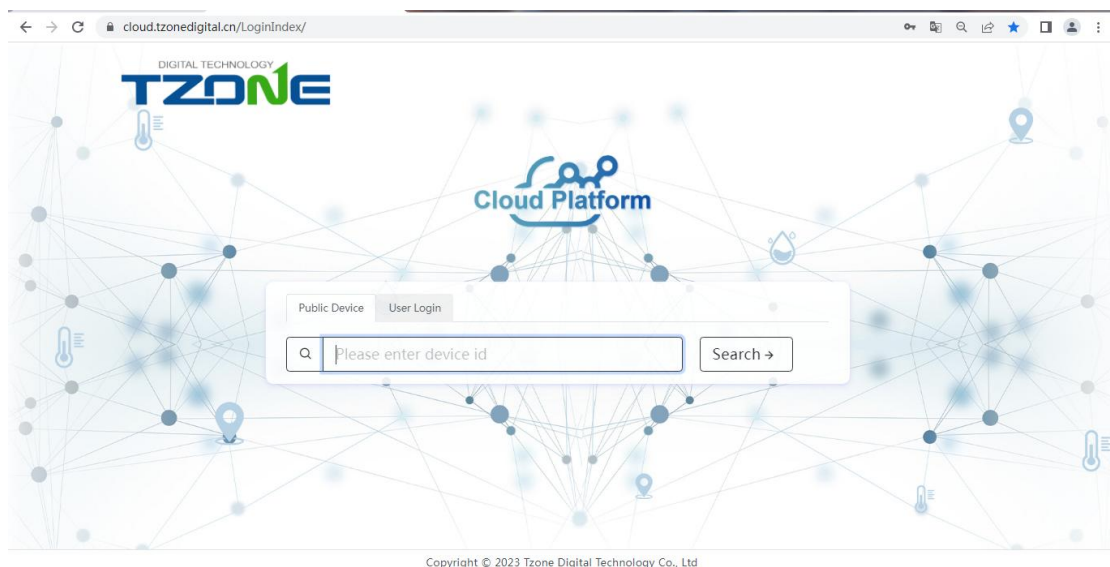

## 5.2.1 Enter device ID query

Fill in the device ID in the box, click "Search" to view this device data.

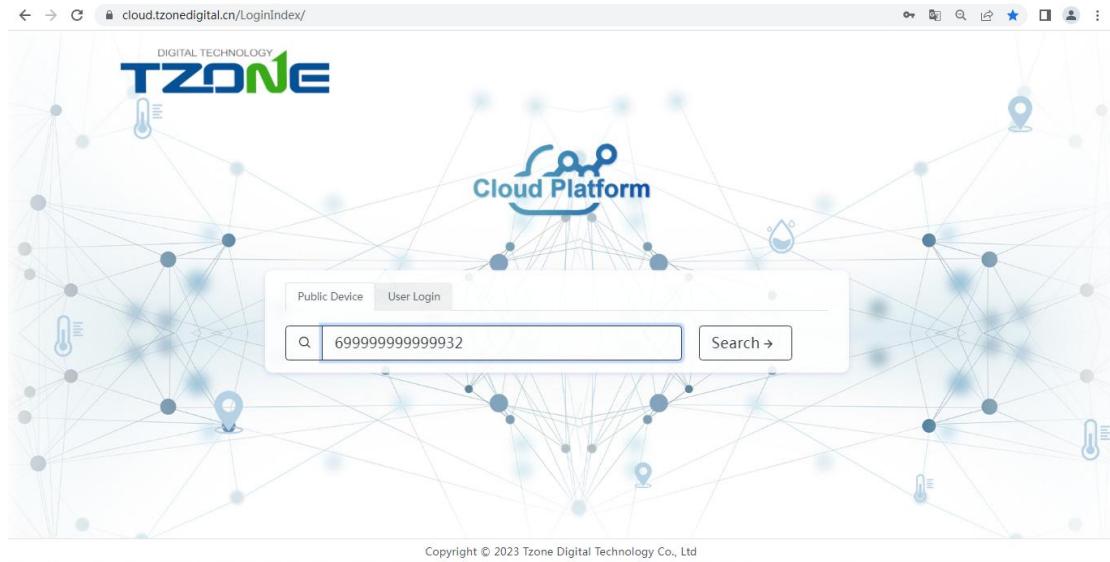

## 5.2.2 Check the data



