

Command	Function	Format	Note
01	Low voltage alarming function	*01,A,X,Y#	A=0: disable this function A=1: enable this function (default) X: low voltage threshold, [2200-3600], unit:1mV, default:2200 Y: transmit interval after low voltage alarming, [1-1440], unit:min, default:30
02	Set heartbeat packet interval	*02,X#	X: [1-1440], unit:min, default:15
03	Set high/low temperature alarming function(TAG08)	*03,A,X,Y,Z#	A=0: disable this function (default) A=1: enable this function X: high temperature threshold, [-55-125], unit: °C, default:100; Y: low temperature threshold, [-55-125], unit:°C, default:0; Z:transmit interval after temperature alarming, [1-1440], unit:min, default:1
03	Set high/low temperature alarming function(TAG08L)	*03,A,X,Y,Z#	A=0: disable this function (default) A=1: enable this function X: high temperature threshold, [-100-70], unit: °C, default:100; Y: low temperature threshold, [-100-70], unit:°C, default:0; Z:transmit interval after temperature alarming, [1-1440], unit:min, default:1
03	Set high/low temperature/ humidity alarming function(TAG08B)	*03,A,X,Y,M,N,Z#	A=0: disable this function (default) A=1: enable this function X: high temperature threshold, [-55-125], unit:°C, default:100; Y: low temperature threshold, [-55-125], unit:°C, default:0; M: high humidity threshold, [0-100], unit:%, default:100 N: low humidity threshold, [0-100], unit:%, default:0 Z: transmit interval after temperature/humidity alarming, [1-1440], unit:min, default:1
04	Set transmit power	*04,X#	X: 15=20dbm,default; 14=19dbm; 13=18dbm;

			<p>12=17dbm; . . . 3=8dbm; 2=7dbm; 1=6dbm; 0=5dbm; 255=Automatic adjustment(default);</p>
05	Set sensor frequency	*05,X#	<p>X=0, 433MHz,default; X=1, 868MHz; X=2, 470Mhz; X=3, 915Mhz;</p>
06	Set the RTC time	*06,Year,Month,Day,Hour,Minute,Second#	For example: *06,18,08,13,12,19,56#
07	Set the maximum data sending delay time	*07,X#	X: delay time, [0,300], unit: second, default: 180
08	Set the time interval for reading temperature and humidity	*08,X#	<p>X: [0,65535], unit:second, default:30 0 indicates that temperature and humidity data are taken at irregular intervals, and temperature and humidity data are not obtained until the transmission interval</p>
09	Extend setting	*09,ABCDEFGH#	<p>A=0, disable ACK function ; A=1, enable ACK function, it must be used with the gateway(default); B=0, sending data does not include RTC time (default); B=1, sending data including RTC time (this is recommended when you enable ACK function); B only works if command 40=0; C=0,The TAG temperature shows Celsius(default); C=1,The temperature data shows Fahrenheit; D=0; E=0; F=0;</p>
21	Set the Channel	*21,X#	<p>X: Channel value, [0,100] (default: 40), this instruction must be used in conjunction with the 05 instruction; Frequency calculation formula: The starting frequency+Channel value*0.2 433 starting frequency is 426MHz,</p>

			<p>Frequency range [426,446], (default: 434MHz);</p> <p>470 starting frequency is 462MHz, Frequency range [462,482], (default: 470MHz);</p> <p>868 starting frequency is 860MHz, Frequency range [860,880], (default: 868MHz);</p> <p>915 starting frequency is 907MHz, Frequency range [907,927], (default: 915MHz);</p> <p>Note: this command needs to be used with 138 command, and the same channel value must be set with corresponding LoRa Sensor</p>
24	Set RF rate	*24,X#	<p>X=0, 300bps(default);</p> <p>X=1, 1kbps;</p> <p>X=2, 1.8kbps;</p> <p>X=3, 3.5kbps;</p> <p>X=4, 7kbps;</p>
35	Set work mode	*35,X#	<p>X=0,turn off(default)</p> <p>X=1,turn on</p>
36	Set buzzer beep time	*36,X#	<p>X:beep time [0,65535],Unit:second,0 means the buzzer is not working(default); 65535 means the buzzer will work until the temperature and humidity return to normal</p>
37	Turn off the buzzer	*37,0#	
	Set the sending protocol	*40,X#	<p>X=0,Not included RTC time, humidity unit is %;</p> <p>X=1,Including RTC time,humidity unit is % (tag08 default);</p> <p>X=2,,Not included RTC time, humidity unit is 0.1%;</p> <p>X=3,Including RTC time,humidity unit is 0.1% (tag08B default);</p>
41	Set the removal margin of temperature alarm (TAG08/08L)	*41,X#	<p>X:Temperature value,[0,120],default:0, unit:°C</p>

41	Set the removal margin of temperature/humidity alarm(TAG08B)	*41,X,Y#	X:Temperature value,[0,120],default:0, unit:°C Y: Humidity value,[0,100],default:0, unit:%
42	Set the temperature and humidity calibration value	*42,A,X,Y#	A=0, Disable calibration;(default) A=1, Enable calibration; X:Temperature calibration value; If the calibration value is added to the temperature, it begins with +; If the calibration value is reduction to the temperature, it begins with -; Can support to one decimal point, unit: °C Y:Humidity calibration value; If the calibration value is added to the humidity, it begins with +; If the calibration value is reduction to the humidity, it begins with -; Can support to one decimal point, unit: %
	Save command	#DS	
	Search single command	#D5X	X: command
	Search all commands	#DE	
	Query current temperature and humidity	#DT	
	USB to read recorded log data	#DP	Automatically delete log data after reading
	Delete recorded log data	#DA	
	Query current time	#DB	
	Quit configuration	#DQ	
	Factory reset	#DO	
	Reboot device	#DR	
	Into firmware upgrade mode	#DU	