

WF501-WF502 configuration software upgrade steps

1. Plug the machine into the configuration cable and connect it to the computer, after ejecting the new disk from the computer,click "Read", as shown in Figure 1

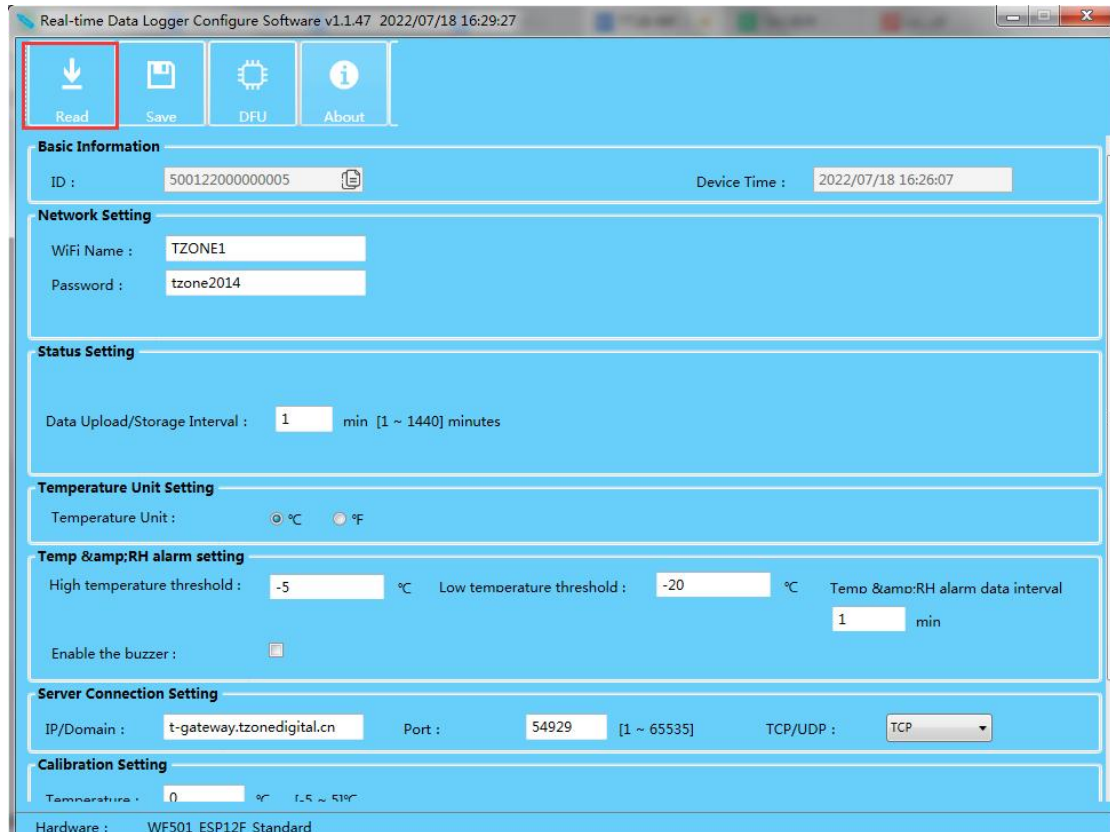


Figure 1

2. Click “DFU”, as shown in Figure 2

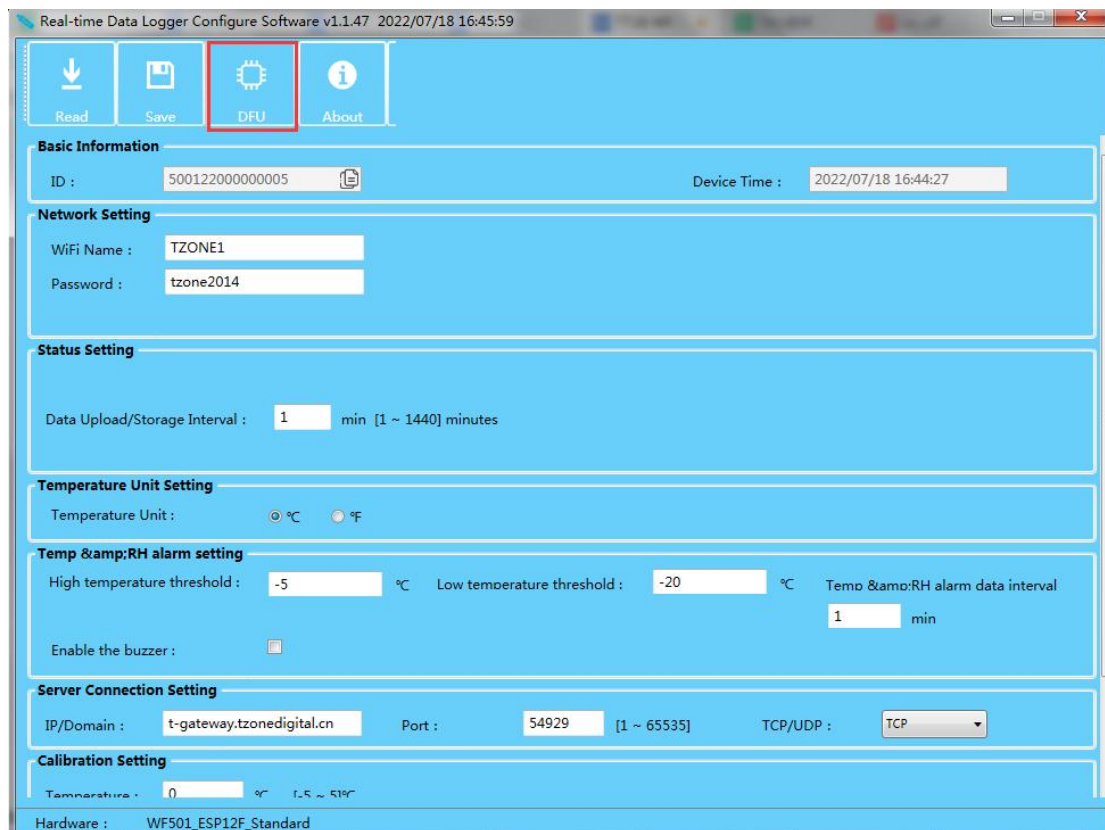


Figure 2

3. After the dialog box pops up, press and hold the machine button, then click "Yes", and then release the button after 5s. At this time, the machine indicator lights should be on at the same time, indicating that the machine has entered the configuration mode, as shown in Figure 3 (Figure 3). 4 "Yes" and "No" will be automatically matched according to the Chinese and English systems of the computer, that is, "YES" and "NO" are displayed in the English system)

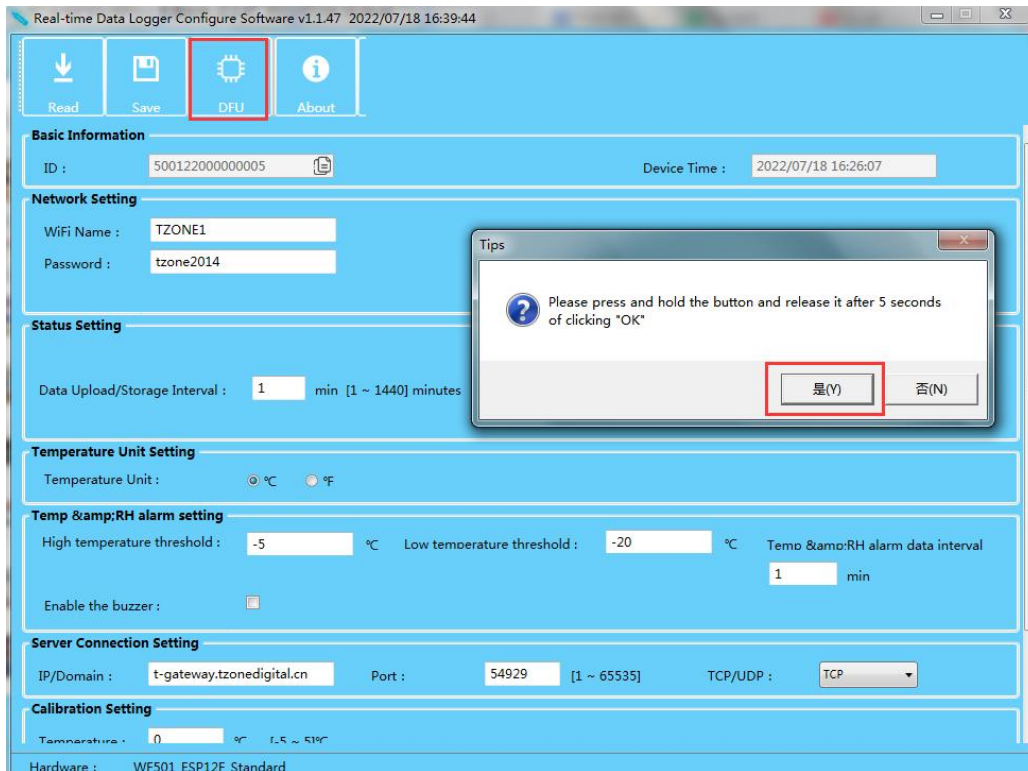


Figure 3

4. Install the driver according to the dialog box prompts, as shown in Figure 4, Figure 5, Figure 6, Figure 7, Figure 8

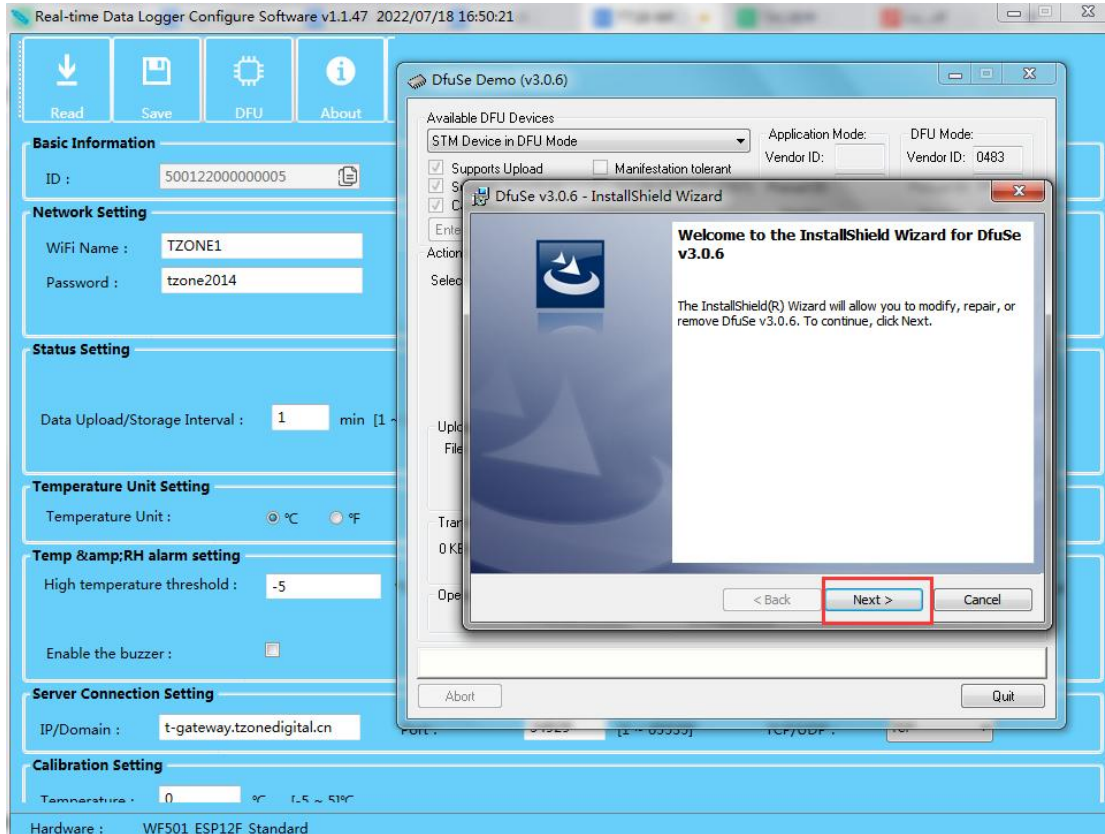


Figure 4

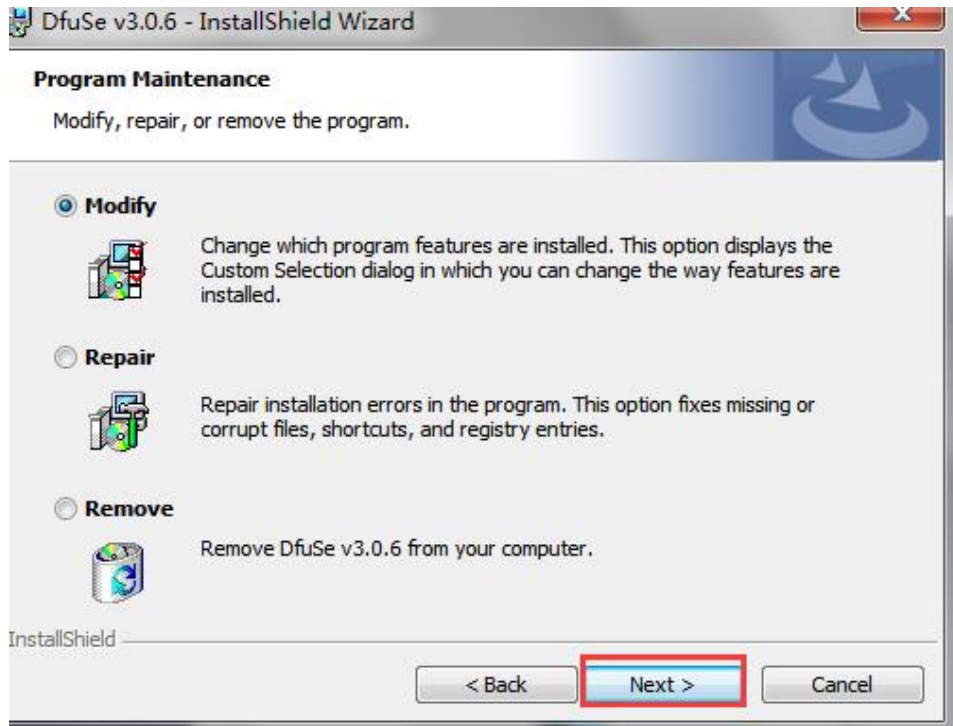


Figure 5

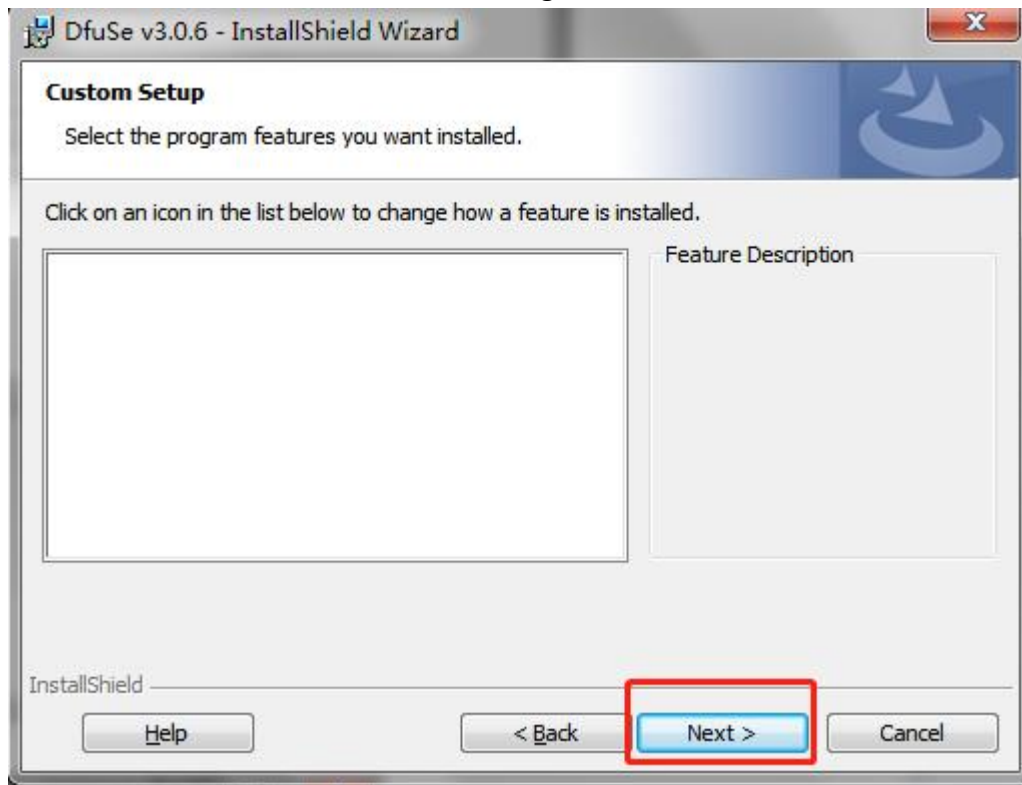


Figure 6

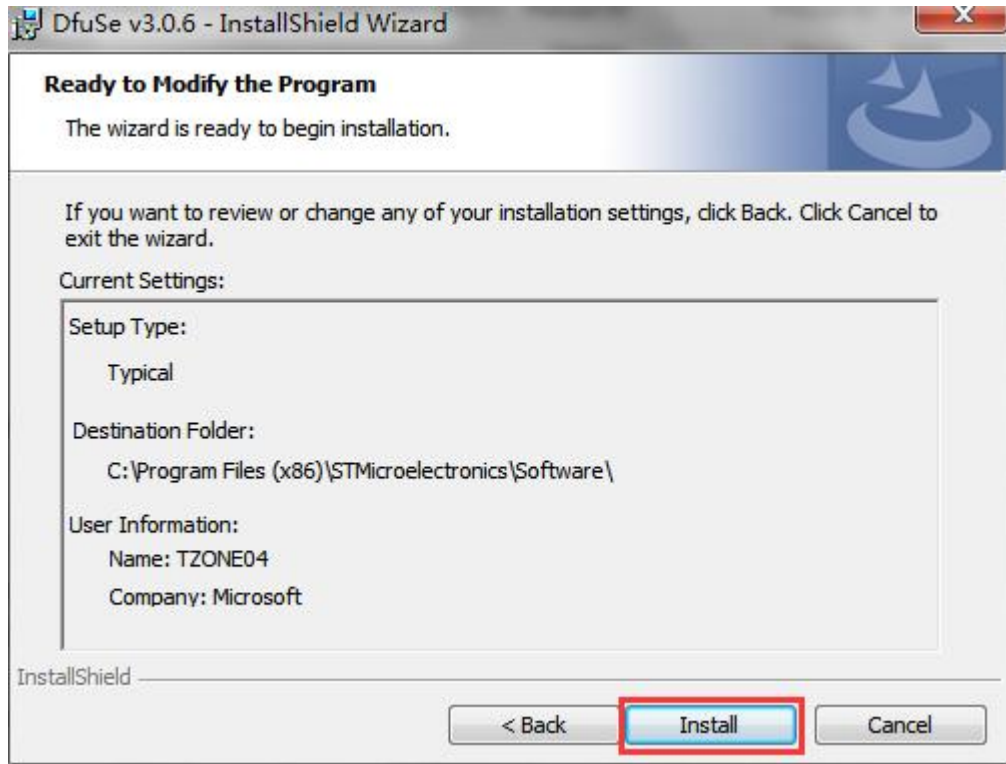


Figure 7

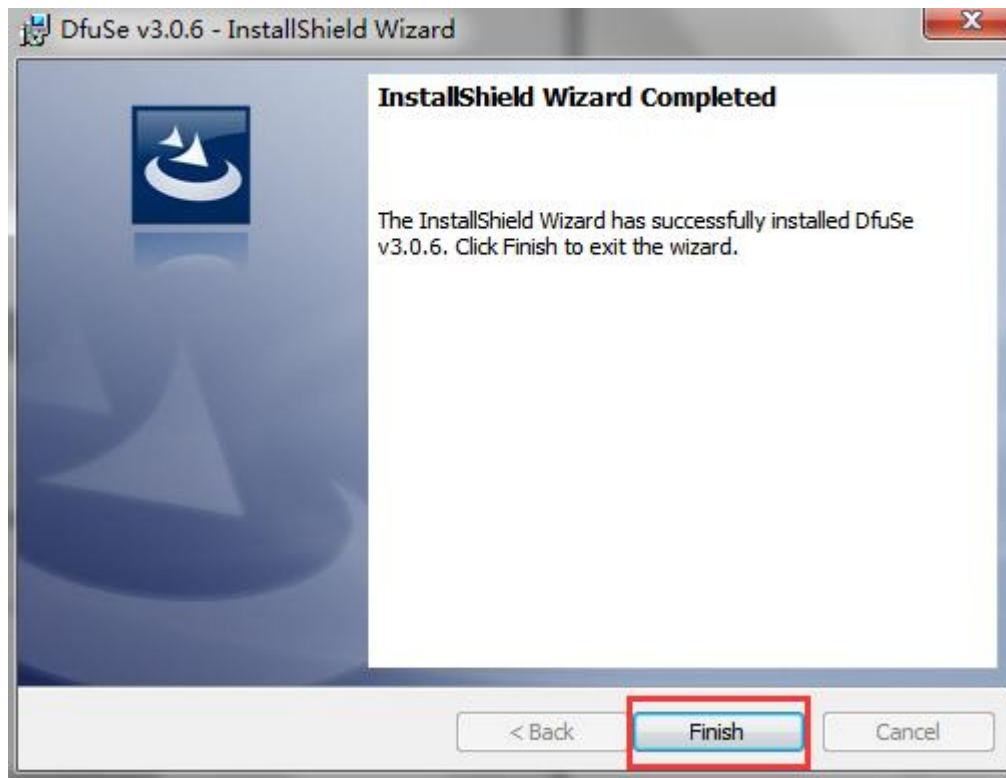


Figure 8

5. After installing the driver, select the firmware to be upgraded, as shown in Figure 9 and Figure 10

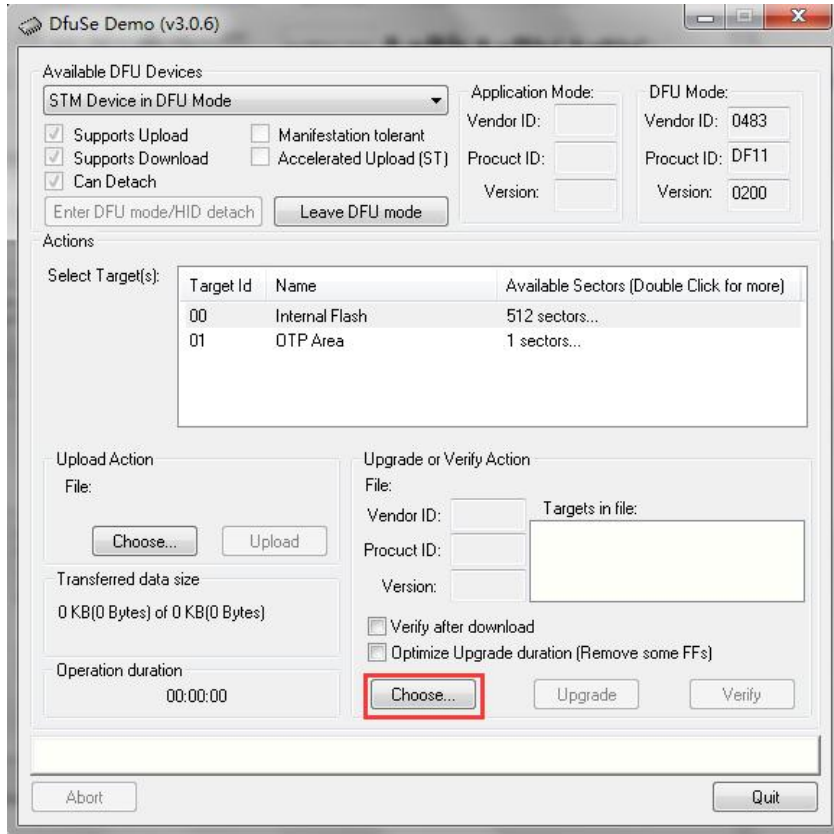


Figure 9

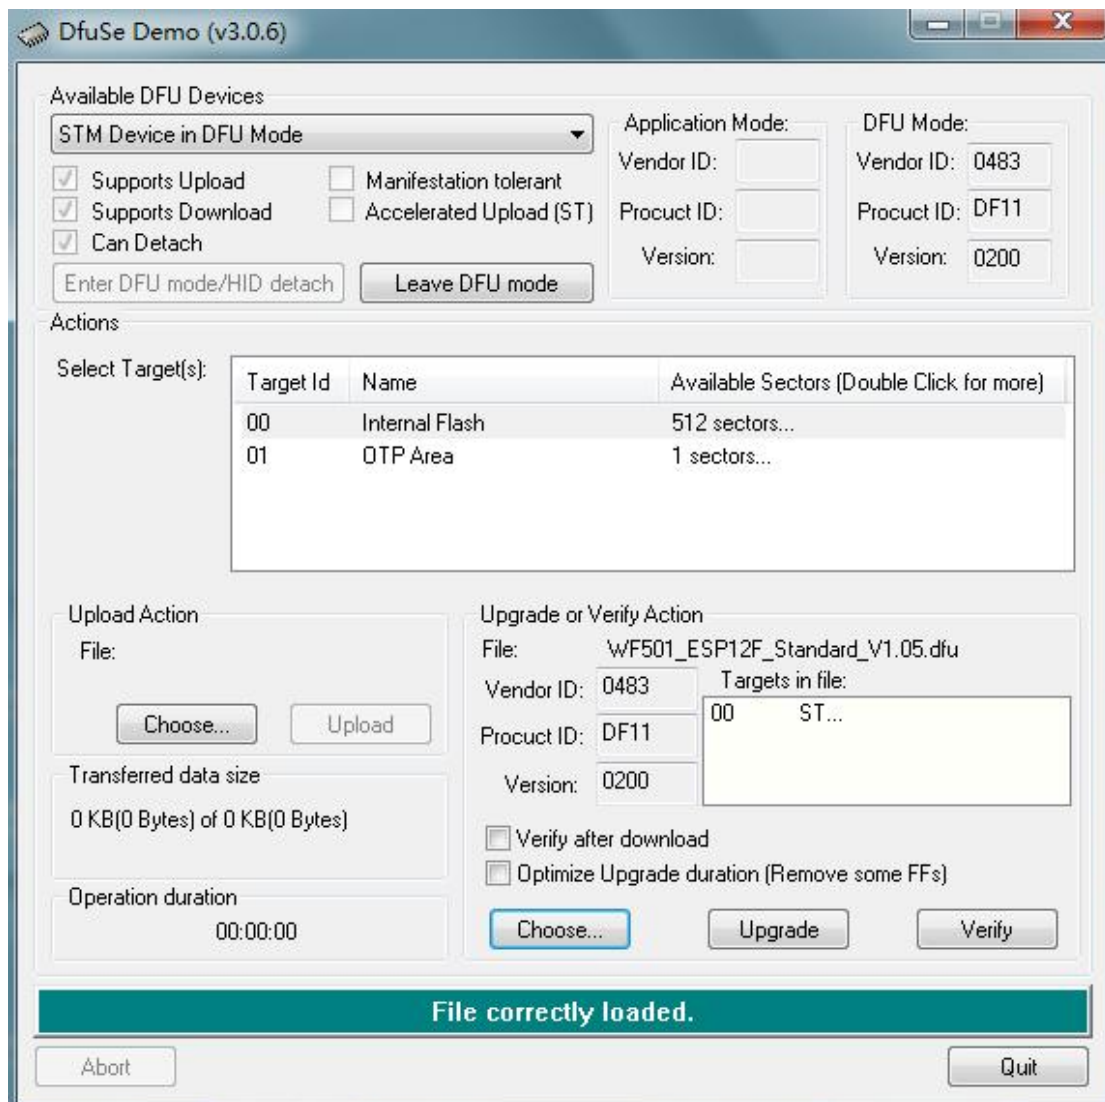


Figure 10

6. After selecting the firmware to be upgraded, click "Upgrade", as shown in Figure 11

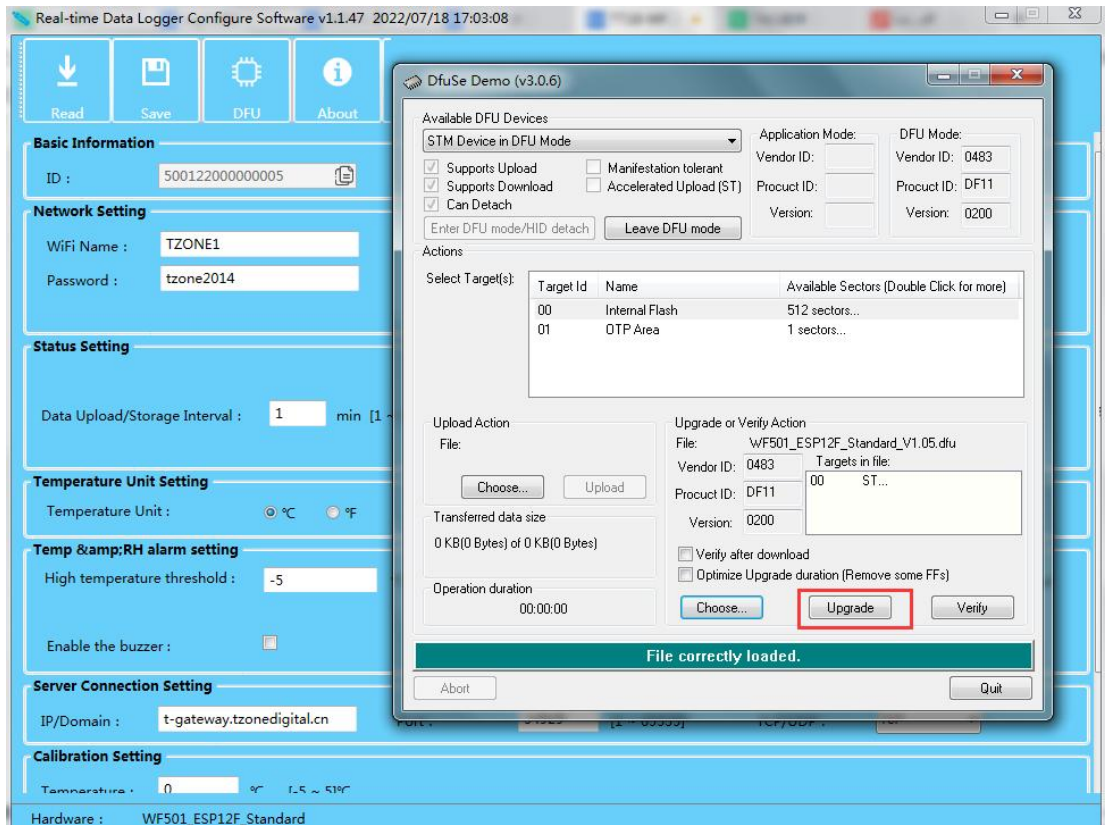


Figure 11

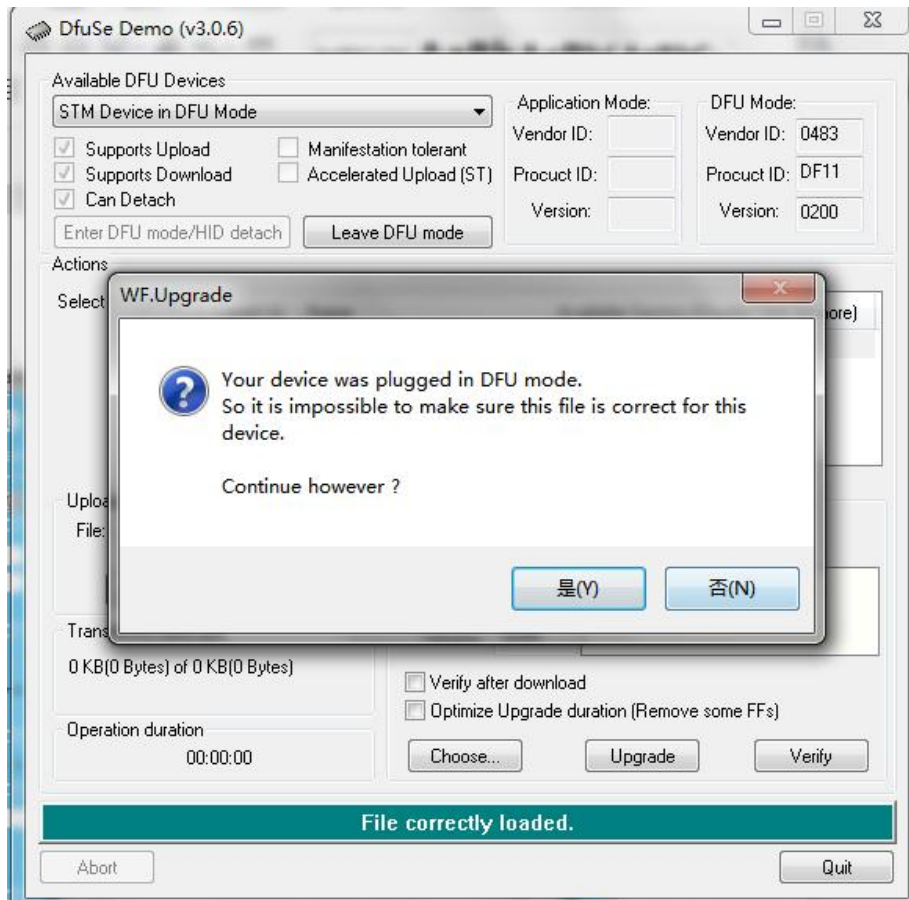


Figure 12

7. Click "Leave DFU mode" after it shows that the upgrade is successful, as shown in Figure 13, the machine can resume normal use after leaving the upgrade mode

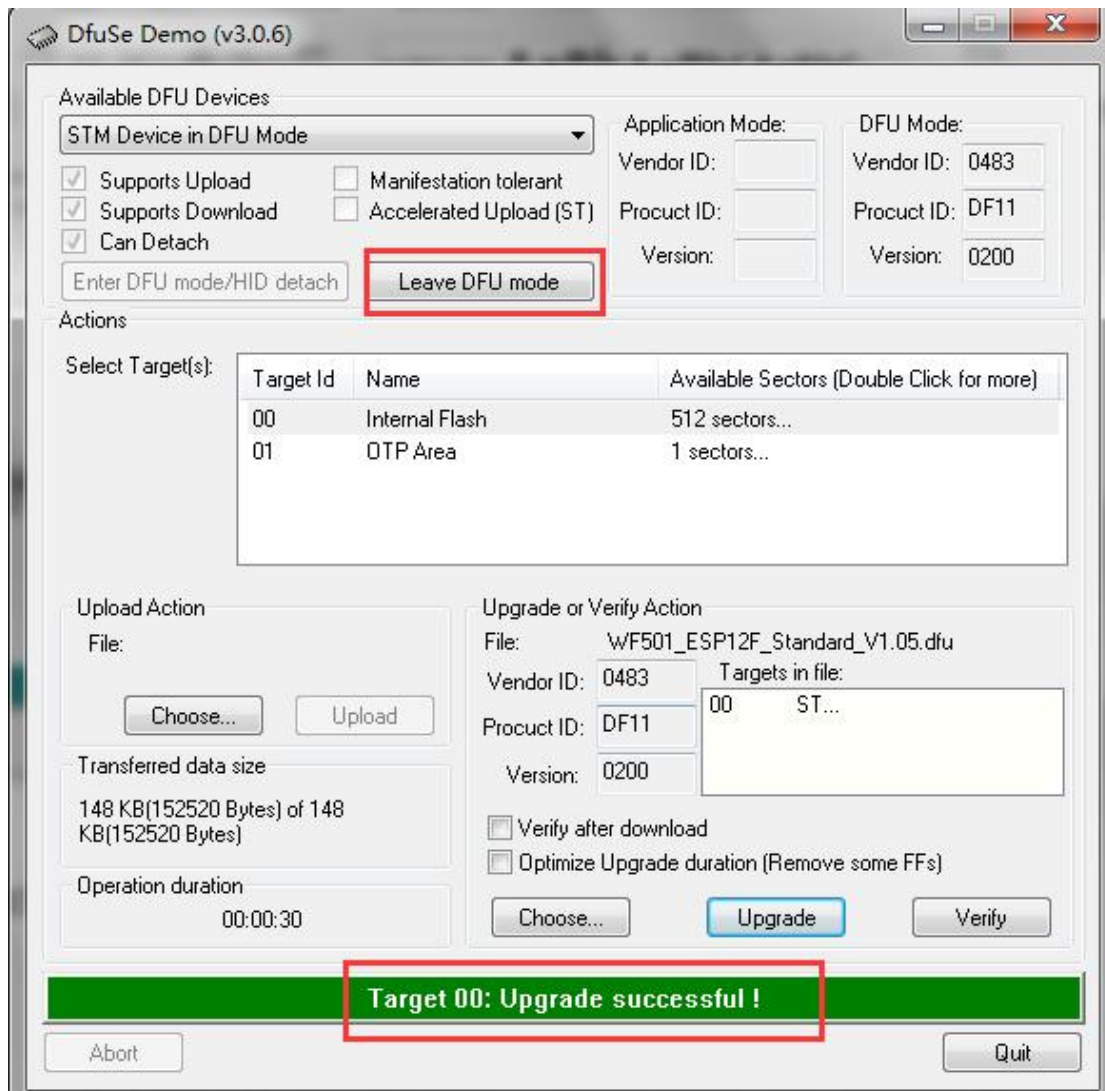


Figure 13

Note: Please initialize the machine before using it after the upgrade!