

TZ-Tag08B ---User Guide



1. Overview

LoRa Wireless Temp & RH Sensor(TZ-Tag08B) is a high quality product designed by Tzone Digital Technology Co., Ltd. Well overcome many shortcomings happened in similar products, with full consideration on tough environment and more. It have features includes long range (5km), small volume (106mm*57mm*33mm), long time using. Validated by many vital projects with stability and reliance features. LoRa Sensor can collect temp & humidity readings with preset interval and send out via LoRa communicating module, then Gateway can translate raw data to temperature & humidity and battery voltage information. Real-time transmission and data storage functions can be implemented simultaneously. It is equipped with LCD, LED and buzzer, For more intuitive viewing of temperature and humidity data, RSSI signal strength, battery power sound and light alarm etc., It could be widely used in temperature & humidity monitoring applications with our gateway products.

2. Application

- 1. Freezer, refrigerator, etc.
- 2. Agricultural greenhouse
- 3.Plant and workshop
- 4. Cold chain reefer and refrigerated trailer
- 5. Pharmacy warehouse and laboratory

3. Feature

- 1.Using SENSIRION temperature and humidity sensor, with reliable stability, large measure range and quick response.
- 2.LoRa communicating module uses the new generated LoRa chip from American Semtech, with strong sending power, powerful penetrability and low attenuation.
- 3. The data collecting time could be set by customers from 1 minute to 1440 minute, with widely application.

- 4.The sensor have 3 working modes: Normal working mode, low voltage mode and temperature/humidity alarming mode. To better track the ambient temperature/humidity change, the data collection time is different in each mode,
- 5.Built-in high performance li-socl2 battery, long time stand-by and stable performance. The electricity is less than 5uA when in the sleep mode, it is equipped with a super capacitor to effectively realize the full utilization of the battery, and solve the problem of battery instability at high and low temperatures.
- 6.All the data collected by the transmitter can be stored in memory, and can be read out through USB.
- 7. Using FDMA, TDMA and other technologies to avoid wireless conflict.
- 8. Ensure data is not lost with ACK.
- 9. When disconnect will automatically updates the sending interval to reduce power consumption.
- 10. The sensor can receive command from gateway, the parameters can be set.
- 11. With LCD display,the message(temperature/humidity data,RSSI signal strength,battery power etc.,)can be visually viewed.
- 12. The buzzer will alarming when the temperature/humidity exceed the limit.

4. Advantages of LoRa Technology

The wireless communication of the device is based on SEMTECH RF integrated chip SX127X RF module, which is a high-performance wireless transceiver for the Internet of things, the special LoRa debugging method can greatly increase the communication distance, so it can be widely used in various occasions, Compared with the traditional wireless communication, LoRa combines digital spread spectrum, digital signal processing and forward error correction coding technology, and has the advantages of small volume, low power consumption, long transmission distance and strong anti-interference ability. It uses spread spectrum modulation technology to demodulate noise less than 20dB, which ensures a high sensitivity and reliable connection while improving communication efficiency and eliminating interference. LoRa technology achieves the communication distance which is much longer than other wireless protocols, which makes the LoRa system can work well without a repeater, thus reducing the total cost of projects.

5.Specification

Item	Feature	
Battery	Built-in 4000mAh/3.6V	
Measure Media	Ambient air	
Accuracy of Temp & RH Sensor	Humidity ±3%(20~80%),±4%(other)	
	Temperature $\pm 0.3 ^{\circ}\text{C}(0\sim60^{\circ}\text{C}), \pm 0.3\sim0.7^{\circ}\text{C}(\text{other})$	
Operating Condition	-30°C~+60°C; 0%RH ~ 85%RH(non-condensed)	
RF Frequency	433/470/868/915MHz	
Modulation	LoRa	
Transmit Power	20dbm(adjustable)	
Maximum Range in Open Area	5KM	
Transmit Interval	1min-1440mins(user definable)	
Low Voltage Alarm	Yes (user definable)	
Temp/RH Alarm	Yes (user definable)	
Stand-by Current	<5uA	
IP Level	IP54	
Memory Capacity	50000	
Battery Life	3 years (in 15mins interval)	
N.W.	135g	
Dimension	106mm*57mm*33mm	

6. Working Mode

Working Mode	Working Status	
Normal Mode	LoRa Sensor will collect Temp & RH readings and send out as settings via LoRa communicating module	
Low voltage mode	Device will send data each 30mins (adjustable) after entering low voltage mode, voltage lower than 2.2V (adjustable), please change new one ASAP	
Temp & RH alarming mode		

P.S.: Priority: Temp & RH alarming mode > Low voltage mode > Normal mode

7. Device status when sending data

The device will flash once when the device is sending a packet of data, and the LCD icon will be displayed.

LED bright status:

Green:normal.

Red:Something wrong with device, such as temperature/humidity exceed the limit, low voltage.

LCD display please refer 9.LCD display indication

8. Function of Button


Mode	Operation	Device status	Indication
On	Keep	1.The green LED bright	The device starts sending data
	button	in 5s	
	pressed for	2.LCD display turn on	
	3s		
Off	Keep	1.The red LED bright in	The device stops sending data
	button	5s	
	pressed for	2.LCD display turn off	
	3s		
Data	Press	LED bright one time	Only valid in boot mode
send	shortly		LED flash status:
			abnormal(red),normal(green)

9.LCD Display Indication

Shutdown mode: the LCD is not display.

Boot mode: the LCD is display.

LCD will display LORA icon, Send icon, Temperature/Humidity alarm icon, Running status, Temperature icon, RSSI signal icon, Battery status, Temperature/Humidity information.

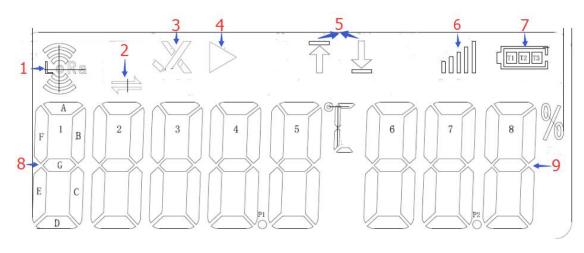

NO	Function	Indication
1	LORA icon	LORA Sensor
2	Send icon	The device will flash when sending data,and
		then off
3	Temperature/Humidity	Normal: √ Alarm: ×
	alarm icon	
4	Running status	Start running
5	Temperature/humidity	Upper limit: ↑ Lower limit: ↓ Upper Lower
	icon	limit: ↑↓
6	RSSI signal icon	[-80,0];
		[-100,-80];
		: [-115,-100];
		1 6
		: [-125,-115];
		: [-138,-125];
		The RSSI value is updated every time the gateway response after receiving the data, so the RSSI value is not displayed, if you don't
		turn on ACK or no response
7	Battery status	: [3.2,3.6];
		: [3.0,3.2];

		: [2.8,3.0]; : [2.5,2.8];
8	Temperature	°C,°F could available (configuration by 09 instruction)unit 0.1,sensor abnormal display
9	Humidity	unit0.1%,humidity reach 100% it display 100%, sensor abnormal display

10.Buzzer working mode

The buzzer will working when temperature/humidity exceed the limit ,the buzzer will ring and then stop.

Open instruction: 1. 03 instruction

2. 36 instruction

How to close buzzer:

- 1. Temperature/humidity return to normal
- 2.Press button shortly;
- 3.Enter configuration mode;
- 4. Turn off:
- 5. The USB sends a close instruction
- 6. The gateway sends a close instruction
- 7. The buzzer working time has ended

PS:

- 1.After the buzzer works once, it needs to happen again after the temperature and humidity are abnormal (the temperature and humidity should return to normal and then abnormal).
- 2. The device is close buzzer function by default ,please open this function if you need.
- 3. The buzzer with high power consumption, it will reduce battery life, Please set this function according to your application

11. Instructions

The factory setting of the device is off mode by default, Please refer to the button function after you get it, press and hold the button for 3s to start up, and the device will

automatically send data to the gateway, The data transmission interval is 15 minutes by default, if you want to send data quickly, please press the button shortly. TZ-Tag08B is a data sender, which should work with our LoRa Gateway/LoRa Gateway_WIFI products. Please check the user guides or contact us directly.

After completing the above steps, you can query the data on our company's platform. If you want configure parameters, Please open the upper cover of device, and insert our configure line, at this time the green LED is bright which indicating the device has entered the configuration mode. For detailed configuration instructions and configuration methods, please refer to "TAG08B" Configure Software Manual.



12.Notes

- 1. Being close to a metal object will interfere with the signal, causing the signal to be weaken.
- 2. Please keep away from water and corrosive chemicals.
- 3. Please tell us your application and configuration requests, we will try to configure it well before delivery and guide you how to install properly.